

Proper VERSATRAX cross-bar installation and removal to foster long term bar performance.



Carefully insert standard head screwdriver into slot between under the cross-bar connecting and link body.

Carefully rotated inserted screwdriver 90° until cross-bar pops open by itself. Cross-bar can swing open 180°.




To close and/or connect the cross-bar, operator thumb is to firmly press down onto snap-joint directly above link.

DO NOT!
Pull from the center of the cross-bar to remove bar, this will result in damaged bars!

DO NOT!
Press at the center of the cross-bar to connect bar, this will result in damaged bars!



Proper VERSATRAX link assembly and disassembly

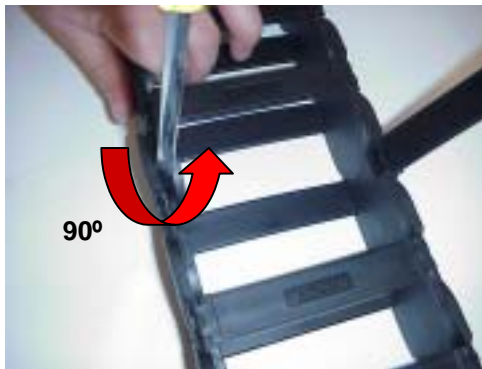

Unsnap cross-bar on the link you will be disconnecting. Insert standard head screwdriver between links above link connecting pin and twist 90° to spread apart these two links.



Keeping a firm grip of the two sections. Carefully pull sections apart by first pulling out one side of the link (see prior step) section, then the other.



Pull the two carrier sections apart.

To reconnect carrier sections, simply reverse these steps.